


Advertising Tent assembly instructions

VARIOUS SIZES

- 10'X10'
- 10'X15'
- 10'X20'

FEATURES

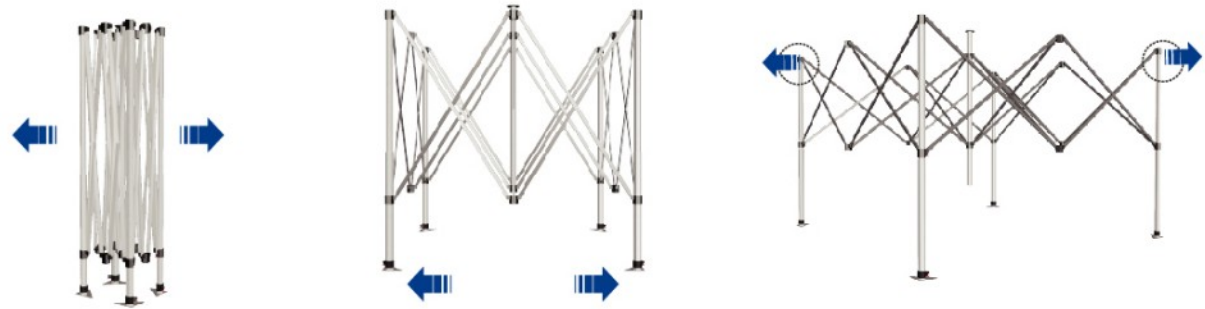

01

Remove the frame from carrying bag

02

Watch out for pinching fingers

03

Two people stand opposite to each other and gently pull the frame until it is half open.



04

Unfold your canopy and drape over the frame. Tie canopy corners and frame corners down with the Velcro.

05

Two people stand diagonal to each other. Lift and separate the frame legs to extent the tent out completely.

06

For height adjustment, stand on the foot of frame leg and slide the frame up until it locks into your desired position.